





# Importing the ETI Parts data in **ePLAN electric P8**

- 1) From [www.etigroup.eu/support](http://www.etigroup.eu/support) download files and unzip the file.
- 2) Start Eplan electric P8
- 3) In Eplan, chose **Utilities** → **Parts** → **Management** (Pict.1)

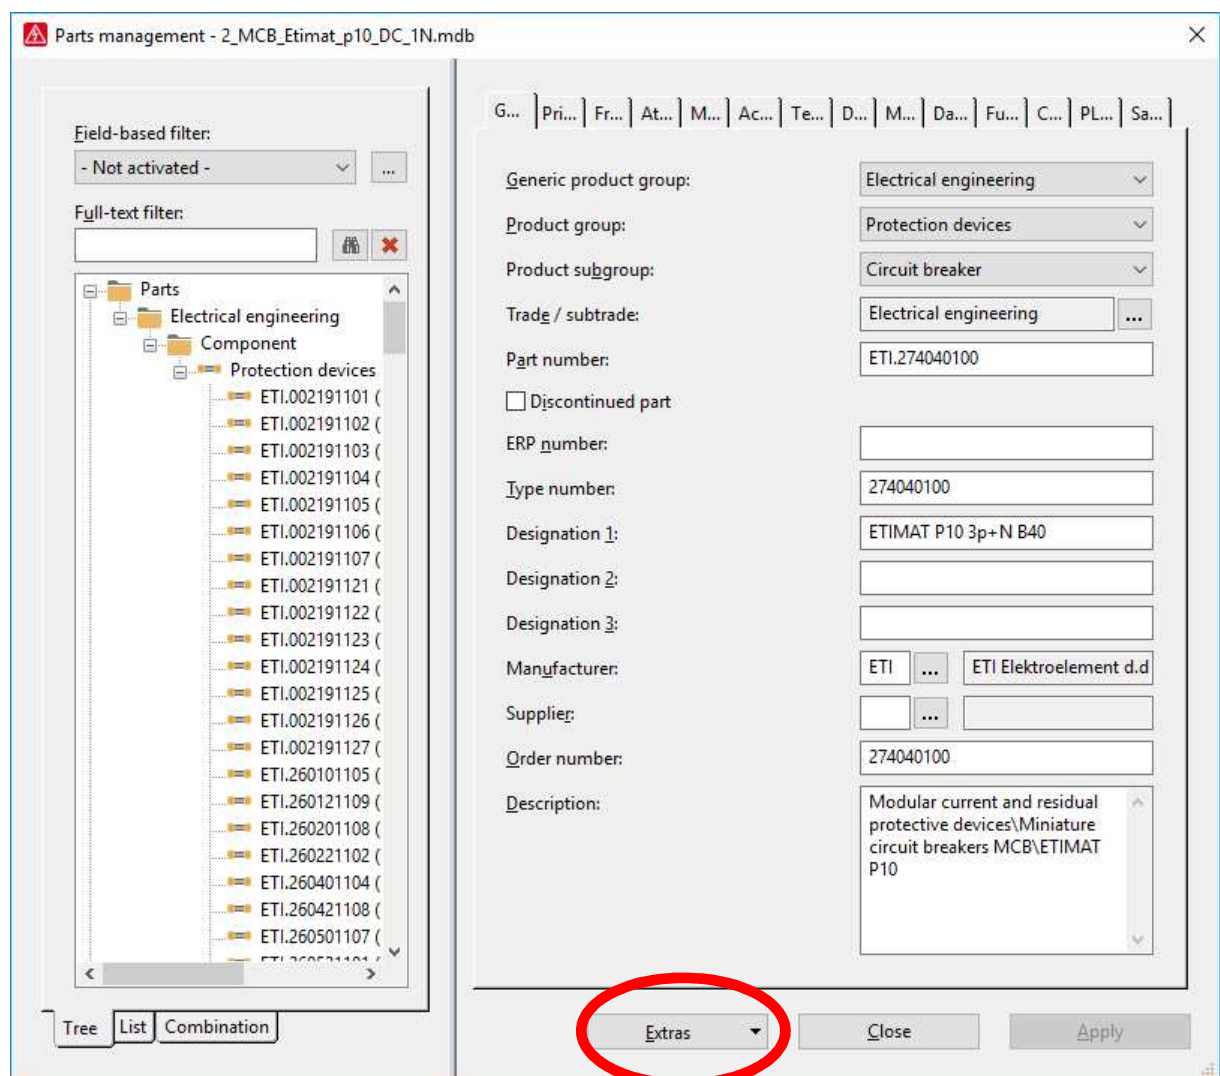

(Pict.1)


- 4) In window Extras chose folder **Import**.
- 5) In folder Import select file type **XML** format, and chose the proper unzipped folder.

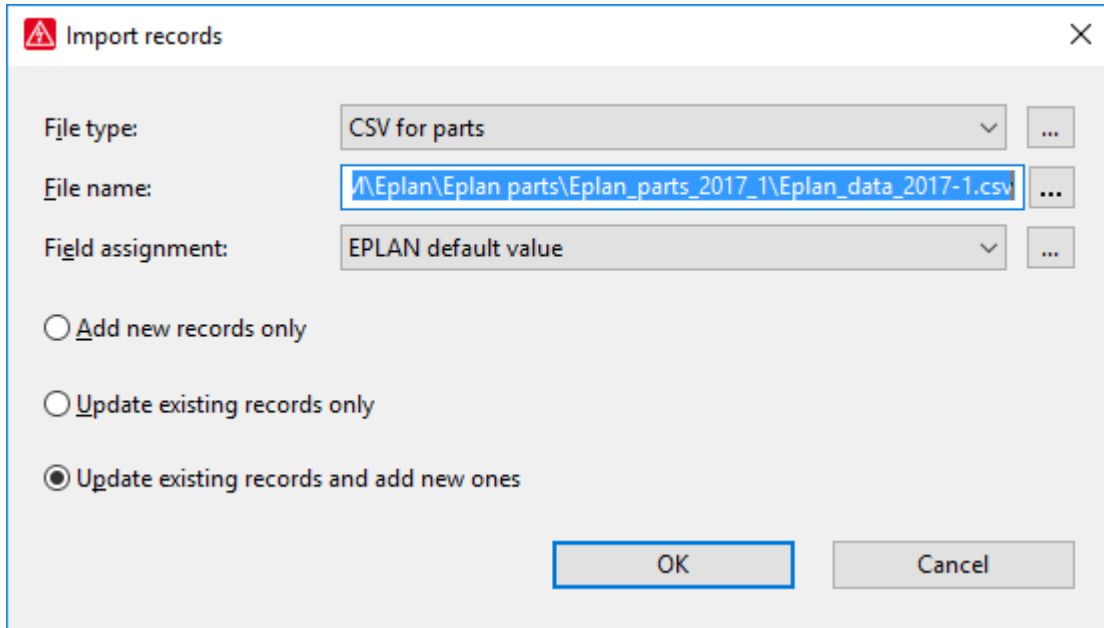

(Pict.2)

#### 6) Import 2D macros (2D front look)

Search in Eplan\Data map for folder Macros (Pict.3).

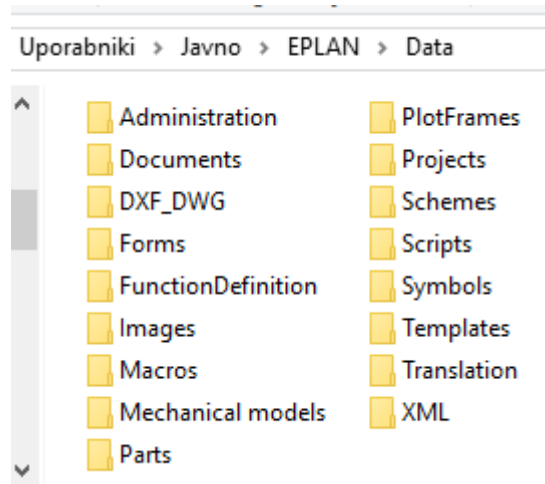

(Pict.3)

If you do not have a folder ETI in map Macros, create new one. Copy all files **\*.ema** from unzipped directory directly to map ETI.

#### 7) Import pictures

For pictures search in Eplan\Data map for folder Images. Use folder ETI. If you do not have ETI folder, create new one.

Copy all files **\*.jpg** from unzipped directory directly to map ETI.